

THRU ROOF PIPE

DEKTITE PIPE FLASHING; CUT TO PIPE SIZE IN FIELD SO THAT FLASHING FITS

*SNUGGLY AROUND PIPE; SET BASE IN CONTINUOUS BEAD OF APPROVED SEALANT.

#3/16 BULB-TITE RIVETS W/ SEALING WASHERS @ 2" O.C.

PRIOR TO SLIDING DEKTITE DOWN OVER PIPE PLACE A CONTINUOUS BEAD OF APPROVED SEALANT AROUND PIPE AT THE HEIGHT OF THE BOOT SO THAT WHEN THE BOOT IS IN PLACE THE TOP OF THE BOOT ENGAGES THE SEALANT.

*SNUGGLY MEANS NO WATER CAN PENETRATE BETWEEN TOP OF BOOT & PIPE.

BEMO ROOF PANEL

NOTES:

- 1) THE DEKTITE PIPE FLASHING MUST BE FASTENED TO THE PANEL ONLY AND NOT INTO THE ROOF SUBSTRATE TO ALLOW THE PANEL TO MOVE THERMALLY.
- 2) ADEQUATE CLEARANCE MUST BE LEFT BETWEEN THE PIPE AND THE PANEL TO ALLOW FOR THERMAL MOVEMENT WITHOUT INTERFERENCE.
- 3) THE PIPE MUST BE CENTERED IN THE PANEL TO ALLOW ADEQUATE CLEARANCE FOR INSTALLATION OF THE DEKTITE WITHOUT INTERFERENCE WITH THE PANEL RIBS.
- 4) FOR REGIONS WITH SNOW & ICE, A ROW OF SNOW GUARDS MUST BE INSTALLED NO GREATER THAN 3' IN FRONT OF THE PIPE PENETRATION FOR PROTECTION.

5) PIPES LARGER THAN 6" IN DIAMETER MAY REQUIRE A CURB DEPENDING ON PANEL WIDTH & PIPE LOCATION. THIS IS TO BE VERIFIED IN FIELD



PANEL:

BEMO

REVISION:

0

DETAIL:

PIPE PENETRATION DETAIL

PAGE:

1 OF 1